



## INSTRUCTIONS FOR CONNECTING BARE WIRE (STRIPPED AND TINNED) INPUT CABLES

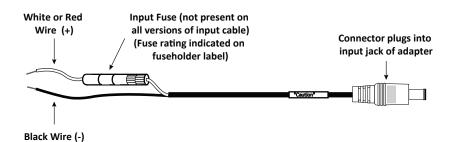

- 1. Connect the white or red wire (+) to the positive power connection point of the vehicle.
- Connect the black wire (-) to a location that will provide suitable connection to the vehicle's negative ground.
- 3. Plug the input cable's connector into the input jack of the DC adapter.


## 24 Watt DC Adapter

(Note: Adapter may appear different than the one shown below)




## 40-70 Watt DC Adapter

(Note: Adapter may appear different than the one shown below)



## 80-120 Watt DC Adapter

(Note: Adapter may appear different than the one shown below)





Lind Electronics, Inc.

www.lindelectronics.com

info@lindelectronics.com

Phone: (800) 659-5956

02/15

© 2015 Lind Electronics, Inc.

SUPSL-F00030-r5.1